

**GENERAL NOTES:** 

1. REFER TO ARCHITECTURAL DRAWINGS FOR ADDITIONAL DETAILS ON NEW DOOR DEVICES. PROVIDE CONDUIT AND WIRING TO ALL NEW ELECTRIFIED DEVICES. SOME ADO PUSHBUTTONS ARE WIRELESS.

**KEYNOTES**:

DISCONNECT AND REMOVE EXISTING DOOR HOLD OPENS. REUSE ONE FOR DOOR D202a. CONNECT NEW ADO AND ALL RELATED PUSHBUTTONS AND DEVICES. PROVIDE A NEW 15A CIRCUIT FROM THE NEAREST POWER PANEL.



DISCONNECT AND REMOVE ALL DOOR HOLD OPENS. RELOCATE THE EXISTING CARD READER TO THE NORTH COLUMN. CONNECT NEW ADO AND ALL RELATED PUSHBUTTONS AND DEVICES. PROVIDE A NEW 15A CIRCUIT FROM THE NEAREST



POWER PANEL.

DISCONNECT AND REMOVE ALL DOOR HOLD OPENS ON DOOR D204b. CONNECT NEW ADO AND ALL RELATED PUSHBUTTONS AND DEVICES. PROVIDE A NEW 15A CIRCUIT FROM THE NEAREST POWER PANEL.



PROVIDE A NEW TANDEM BREAKER IN PANEL SH. PANEL IS A CUTLER HAMMER PL1A PANEL.

CONNECT NEW ADO TO NEW POWER CIRCUIT. CONNECT ALL RELATED PUSHBUTTONS AND DEVICES. PROVIDE A NEW 15A CIRCUIT FROM THE NEAREST POWER PANEL.



DISCONNECT AND REINSTALL EXISTING ADO COMPLETE WITH ALL RELATED PUSHBUTTONS AND DEVICES.

PROVIDE TWO (2) NEW HONEYWELL PROFUSION 31955099 CMP PLENUM ACESS CONTROL CABLE FROM THE DOOR TO THE NEAREST CARD ACCESS CONTROL PANEL. ENSURE THERE IS SUFFICIENT SLACK TO CONNECT FUTURE DEVICES. RUN NEW WIRING TO FUTURE CARD READER LOCATION.




OPENS. CONNECT NEW ADO AND ALL RELATED PUSHBUTTONS AND DEVICES. PROVIDE A NEW 15A CIRCUIT FROM THE NEAREST POWER PANEL.



9 CONNECT EXISTING FIRE ALARM DOOR HOLD OPEN SIGNAL TO THE NEW ADO FIRE ALARM RELEASE INPUT.

DISCONNECT AND REMOVE ALL DOOR HOLD

(10) PROVIDE A NEW HONEYWELL PROFUSION 31955099 CMP PLENUM ACESS CONTROL CABLE FROM THE DOOR TO THE NEAREST CARD ACCESS CONTROL PANEL. ENSURE THERE IS SUFFICIENT SLACK TO CONNECT FUTURE DEVICES. RUN NEW WIRING TO FUTURE CARD READER LOCATION.

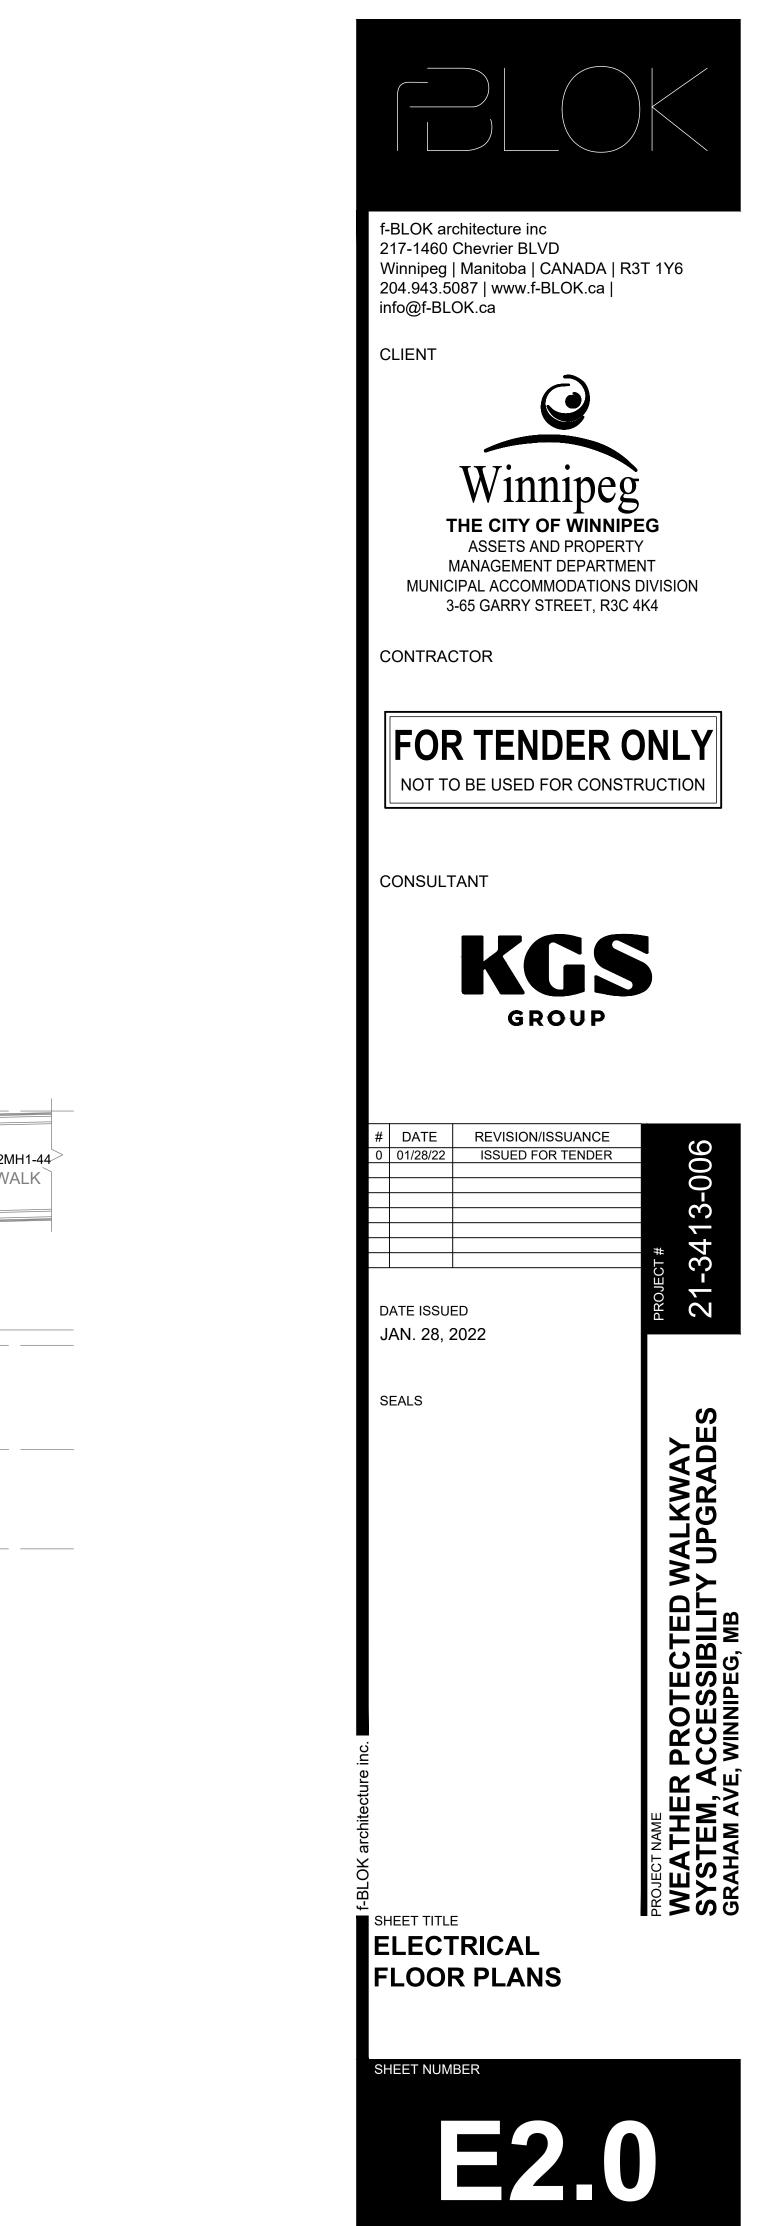

(12) ADO 💿 • ADO 10 9 8 DO N2MH1-44 SKYWALK (D211)-