

POINT	POINT DESCRIPTION	ASSOCIATED DEVICE	CONTROLLER ID																							
			05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26		
AO-1	PROPORTIONAL MIXED AIR DAMPER	ADVANCED CONTROL TECH. DRN2-0/135-3	X	X				X	X	X	X	X		X	X	X	X	X			X		X			
AO-2	PROPORTIONAL GAS VALVE	ADVANCED CONTROL TECH. DRN2-0/135-3	X	X				X	X	X	X	X		X	X	X	X	X			X		X			
DO-3	BLOWER START/STOP	24VAC 2PDT RELAY	X	X				X	X	X	X	X		X	X	X	X	X			X		X			
DO-4	HEATING ENABLE/DISABLE	24VAC 2PDT RELAY	X	X				X	X	X	X	X		X	X	X	X	X			X		X			
DO-5	(SPARE)																									
DO-6	(SPARE)																									
DO-7	(SPARE)																									
DO-8	(SPARE)																									
AI-1	SPACE TEMPERATURE	TE-6000-4 1000 OHM RTD	X	X				X	X	X	X	X		X	X	X	X	X			X		X			
AI-2	SUPPLY AIR TEMPERATURE	TE-6000-4 1000 OHM RTD	X	X				X	X	X	X	X		X	X	X	X	X			X		X			
AI-3	FILTER DIFFERENTIAL PRESSURE	INNOVEX 600D 2' 12D 4-20 mA	X	X				X	X	X	X	X		X	X	X	X	X			X		X			
AI-4	NO2 SENSOR	B&W TECHNOLOGIES	X	X				X		X				X			X									
AI-5	OUTSIDE AIR TEMPERATURE	TE-6000-4 1000 OHM RTD		X																						
AI-6	(SPARE)																									
AI-7	(SPARE)																									
AI-8	(SPARE)																									
DI-1	BLOWER STATUS	CURRENT SENSING SWITCH	X	X				X	X	X	X	X		X	X	X	X	X			X		X			
DI-2	OVERHEAD DOOR STATUS "A"	DRY CONTACT ON OVERHEAD DOOR	⊗	⊗				⊗		⊗	⊗			⊗			⊗	⊗			⊗					
DI-3	OVERHEAD DOOR STATUS "B"	DRY CONTACT ON OVERHEAD DOOR	⊗	⊗				⊗		⊗	⊗			⊗			⊗	⊗			⊗					
DI-4	OVERHEAD DOOR STATUS "C"	DRY CONTACT ON OVERHEAD DOOR						⊗		⊗	⊗			⊗			⊗	⊗			⊗					
DI-5	LOCAL OCCUPIED MODE OVERRIDE	INTERMATIC FF6H 0-6 HOUR TIMER																						X		
DI-6	(SPARE)																									
DI-7	FLAME FAILURE	DRY CONTACT ON FLAME FAILURE RELAY	X	X				X	X	X	X	X		X	X	X	X	X			X		X			
DI-8	ALARM DISABLE	(USE JUMPER WIRE IF FUNTION REQUIRED)																								

⊗ TO BE WIRED AT FUTURE DATE.

FORT ROUGE GARAGE STORAGE GARAGE DC9100 CONTROLLER	REVISION 2
DDC CNTLR POINT LAYOUT	DRAWING NO. 1501-09D-i