


TITLE

# Pedra Double Timber Edging Detail

SCD 651AR

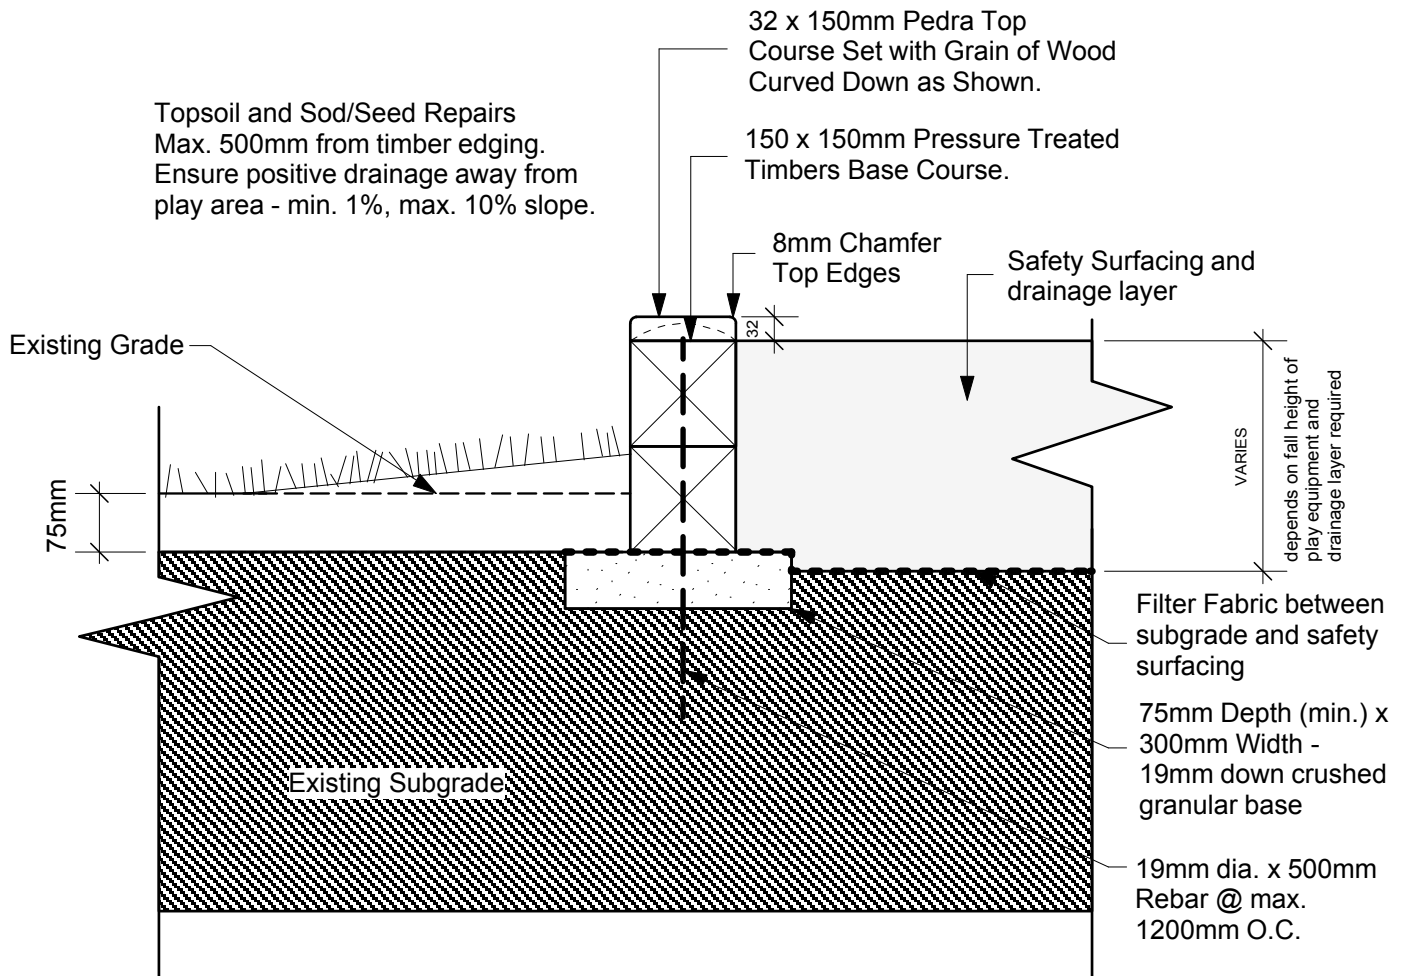

Base course timber shall be pinned with minimum of two (2) 19mm dia. rebar @ max. 1200mm O.C.  
Pedra top course shall be pre-drilled and screwed down using screws treated for ACQ use and sized to suit. Two screws at each end and every 600mm alternating sides along length. Only use butt joints for straight sections of pedra. Min. length of timbers to be 1200mm. Install longest lengths possible.

**NOTE:**

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

Scale: NTS

Drawn By: H.F.

Date: Jan.09

THE CITY OF WINNIPEG  
Planning, Property and Development Department  
Planning and Land Use Division  
Unit 15 - 10 Fort Street, Winnipeg, MB, R3C 4X5

