

GENERAL NOTES

- SCUPPER MUST BE PREFABRICATED. LAPS MUST BE FULLY SOLDERED.
- 2. SCUPPER MUST BE INSPECTED BY THE CONSULTANT PRIOR TO INSTALLATION.
- 3. INSTALL SCUPPER OVER THE BASE SHEET IN A FULL BED OF COMPATIBLE CEMENT IN THE SCUPPER OPENING.
- 4. FIELD VERIFY DIMENSIONS H & W.
- SCUPPER MUST BE WRAPPED WITH PREFINISHED METAL, OR PAINTED TO MATCH.





389 MAXWELL CRESCENT Regina, SK S4N 5X9 www.rmiseng.ca Phone 306.352.4606 Fax 306.352.4607




FIRE HALL #23 C.13.MB.35-18.05.03


880 DALHOUSIE DRIVE WINNIPEG, MB R3T 2Z9

INTERIOR SCUPPER ISOMETRIC

NTS - WITH DIMENSIONS



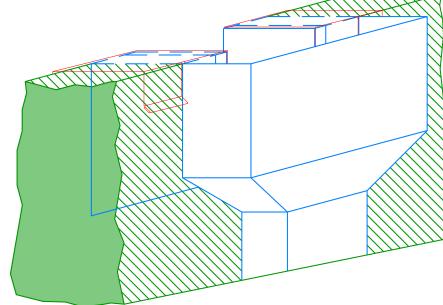

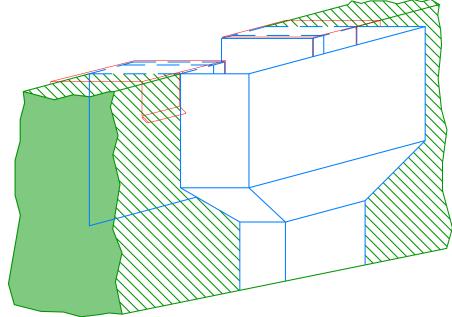

EXTERIOR SCUPPER ISOMETRIC NTS - WITHOUT DIMENSIONS

CITY OF WINNIPEG 4TH FLOOR - 185 KING STREET WINNIPEG, MB R3B 1J1 DESCRIPTION DESIGNED BY SMC 05/04/2018 DRAWN BY CJB 05/04/2018 REVIEWED BY SMC 05/04/2018 SCUPPER ISO DETAILS

