


INSTALLATION NOTES:
 1- INSTALL TOP SUPPORT ANGLES (903B) WITH BOLTS IN PLACE AS SHOWN.
 2- INSTALL PANEL A, THEN PANEL B, THEN DOOR.
 3- INSTALL BOTTOM ANGLES (903B) C/W BOLTS, ADD DOUBLE NUTS.
 4- ADJUST TO ENSURE PROPER DOOR CLOSURE.

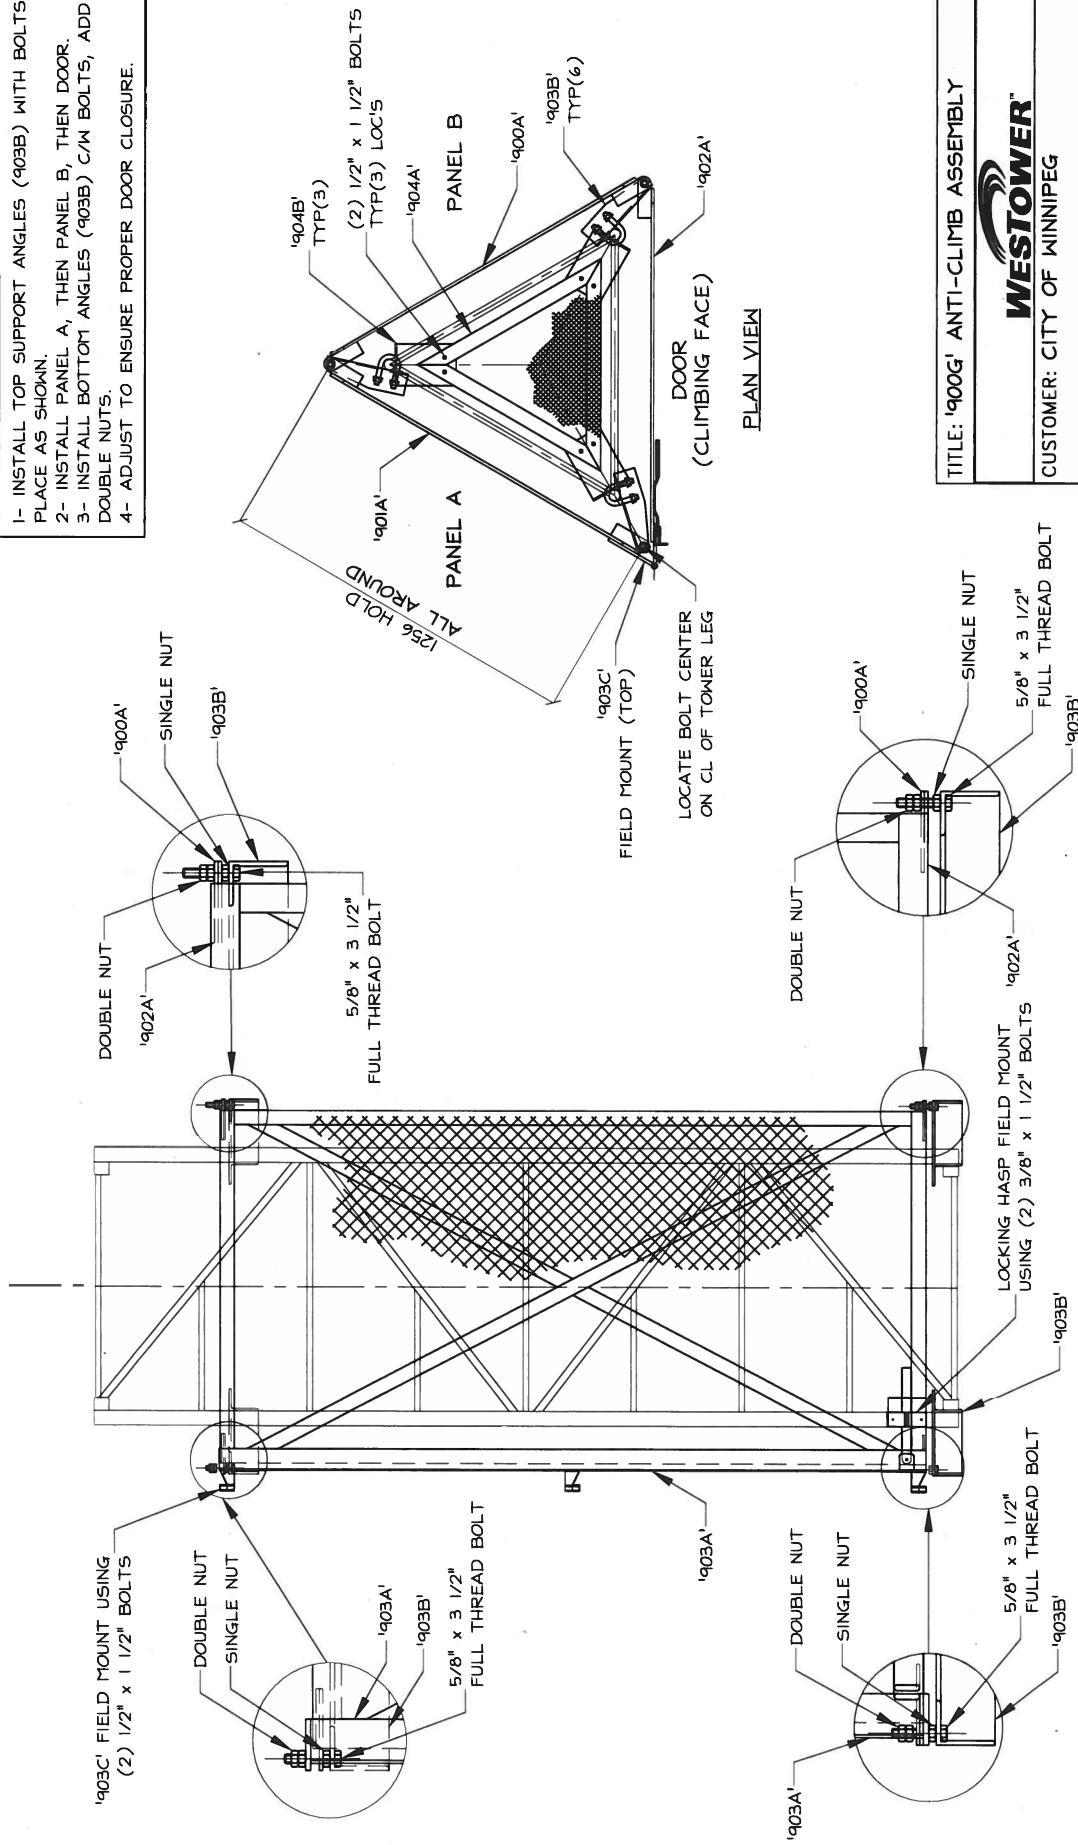

TITLE: 900G' ANTI-CLIMB ASSEMBLY



CUSTOMER: CITY OF WINNIPEG

PROJECT: 900G' TOWER

SITE: MURRAY

DWN BY/APP'D: JSG
 DATE: 19/07/16
 PROJECT No.: 22-00233

DRAWING No.: -E10

ELEVATION VIEW